


DA Dual Ethernet Sled Installation Guide

- Dual 10/100TX Ethernet communication
- Industrial rated for harsh environments
- Wide operating temperature range
- Simplified deployment architecture
- Field installable
- Individually isolated ports

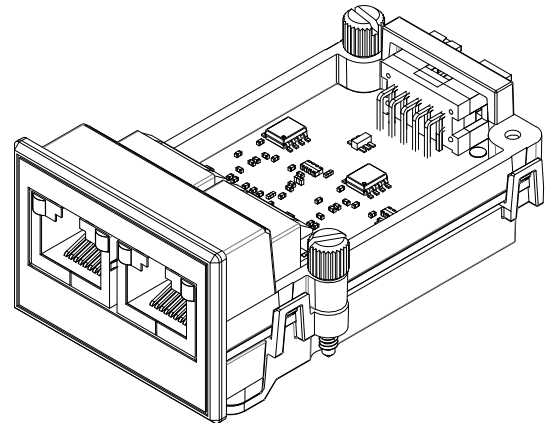

For use with DA50 and DA70 series covered in DEMKO 20 ATEX 2268X and IECEx UL 20.0007X certificates



PACKAGE CHECKLIST

This product package should contain the items listed below. If any items are missing or damaged, contact Red Lion immediately.

- DA Dual Ethernet Sled
- Installation Guide

SAFETY SUMMARY

All safety related regulations, local codes as well as instructions that appear in this document or on equipment must be observed to ensure personal safety and to prevent damage to either the device or equipment connected to it.

Do not use these products to replace proper safety interlocking. No software-based device (or any other solid-state device) should ever be designed to be responsible for the maintenance of personnel safety or consequential equipment not equipped with safeguards. Red Lion disclaims any responsibility for damages, either direct or consequential, that result from the use of this equipment in a manner not consistent with these specifications.

	<p>CAUTION: Risk of Danger Read complete instructions prior to installation and operation of the unit.</p> <p>ATTENTION : Risque de danger Lire les instructions complètes avant l'installation et l'utilisation de l'appareil.</p>
--	---

SPECIFICATIONS

- POWER REQUIREMENTS:** Power is supplied by the DA host controller.
 Max Power: 2.1 W
- INTERFACES:**
 Two 10/100 BaseTX RJ-45 Ports, auto MDI/ MDI-X.
 Individual isolation from Ethernet network to controller:
 1500 Vrms
- ENVIRONMENTAL CONDITIONS:**
 Operating Temperature Range: -40 to 75 °C
 Storage Temperature Range: -40 to 80 °C
 Vibration to IEC 60068-2-6: Operational 5-500 Hz, 2 g
 Shock to IEC 60068-2-27: Operational 15 g

Operating and Storage Humidity: 0 to 95% max. RH non-condensing

Altitude: Up to 2000 meters

4. CERTIFICATIONS AND COMPLIANCES:

Refer to the controller manual for agency certifications.
 CE Approved

EN 61326-1 Immunity to Industrial Locations

Emission CISPR 11 Class A

IEC/EN 61010-1

RoHS Compliant

- INSTALLATION REQUIREMENTS:** Sled must be installed inside the unit case with the hardware provided. See "Installing the Dual Ethernet Sled" for more details.

- WEIGHT:** 7.05 oz (200 g)

INSTALLING THE DUAL ETHERNET SLED

	<p>CAUTION: Follow standard ESD precautionary procedures.</p> <p>ATTENTION: Suivez les procédures de précaution standard de décharge électrostatique.</p>
--	---

	<p>WARNING - Disconnect all power to the unit before installing or removing sleds.</p> <p>AVERTISSEMENT - Débranchez l'alimentation électrique de l'appareil avant d'installer ou de retirer les tiroirs.</p>
--	---

DA50 INSTALLATION

- Prior to installing the Sled for your DA50 application, ensure that the unit is not receiving power.
- Disconnect and remove your DA50 from the DIN rail.
- Remove the DA50 unit's front cap by squeezing the sides and pulling.
- Slide out the sled holder.
- Install the sled into the sled holder and hand tighten the captive fasteners, or use a screwdriver.
- Re-install the sled holder containing the sled into the Converter. Make sure it is fully seated.
- Replace the front cap.

DA70 INSTALLATION

1. Prior to installing the Sled(s) for your DA70 Controller application, ensure that the Controller is not receiving power.
2. Remove the carriage from the Controller case by releasing the two retaining latches and pulling straight out from Controller.
3. Remove blank panel from the carriage slot of the target sled installation location.
4. Install sled by aligning the two sled mounting hole fasteners, with the controller mounting posts. Be sure locating holes on bottom side of sled align with the locating pins on the carriage, and the sled sits flush against the carriage.
5. Hand tighten the sled captive fasteners, or use a screwdriver if necessary.
6. Repeat the above steps for any additional sleds.
7. Carefully align the carriage with Controller base and press carriage into the controller.



CAUTION: Failure to properly align the carriage can result in damage to the Sled connector pins.

ATTENTION: Si le chariot n'est pas correctement aligné, les broches du connecteur du chariot risquent d'être endommagées.

8. Close the retaining latches to ensure the carriage is fully seated into the Controller case.

CONFIGURING THE DUAL ETHERNET SLED

DA50N CONFIGURATION

The Dual Ethernet Sled is configured using the web GUI. For configuration and troubleshooting information, please refer to the DA50N Software Manual for troubleshooting steps at www.redlion.net/support/documentation.

DA50A or DA70A CONFIGURATION

The Dual Ethernet Sled is configured using the web GUI or Crimson 3.2 (or later) software. Find additional information in the Crimson 3.2 User Manual.

LEDs

STS LED

The STS LED provides status for the Dual Ethernet Sled. Refer to the software user manual for more detailed information of possible LED statuses.

LED COLOR(S)	MEANING
YELLOW solid	Link established.
YELLOW flashing	Data being transferred.
GREEN (OFF)	10 BASE-T Communications
GREEN (ON)	100 BASE-TX Communications

RED LION CONTROLS TECHNICAL SUPPORT

If for any reason you have trouble operating, connecting, or simply have questions concerning your new unit, contact Red Lion's technical support.

Support: support.redlion.net

Website: www.redlion.net

Inside US: +1 (877) 432-9908

Outside US: +1 (717) 767-6511

Red Lion Controls, Inc.

20 Willow Springs Circle York, PA 17406

ORDERING INFORMATION

PART NUMBER	DESCRIPTION
DAS00PN1EE200000	Dual Ethernet Sled

COPYRIGHT

©2020 Red Lion Controls, Inc. All rights reserved. Red Lion and the Red Lion logo are trademarks of Red Lion Controls, Inc. All other company and product names are trademarks of their respective owners.

LIMITED WARRANTY

(a) Red Lion Controls Inc. (the "Company") warrants that all Products shall be free from defects in material and workmanship under normal use for the period of time provided in "Statement of Warranty Periods" (available at www.redlion.net) current at the time of shipment of the Products (the "Warranty Period"). **EXCEPT FOR THE ABOVE-STATED WARRANTY, COMPANY MAKES NO WARRANTY WHATSOEVER WITH RESPECT TO THE PRODUCTS, INCLUDING ANY (A) WARRANTY OF MERCHANTABILITY; (B) WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE; OR (C) WARRANTY AGAINST INFRINGEMENT OF INTELLECTUAL PROPERTY RIGHTS OF A THIRD PARTY; WHETHER EXPRESS OR IMPLIED BY LAW, COURSE OF DEALING, COURSE OF PERFORMANCE, USAGE OF TRADE OR OTHERWISE.** Customer shall be responsible for determining that a Product is suitable for Customer's use and that such use complies with any applicable local, state or federal law.

(b) The Company shall not be liable for a breach of the warranty set forth in paragraph (a) if (i) the defect is a result of Customer's failure to store, install, commission or maintain the Product according to specifications; (ii) Customer alters or repairs such Product without the prior written consent of Company.

(c) Subject to paragraph (b), with respect to any such Product during the Warranty Period, Company shall, in its sole discretion, either (i) repair or replace the Product; or (ii) credit or refund the price of Product provided that, if Company so requests, Customer shall, at Company's expense, return such Product to Company.

(d) **THE REMEDIES SET FORTH IN PARAGRAPH (c) SHALL BE THE CUSTOMER'S SOLE AND EXCLUSIVE REMEDY AND COMPANY'S ENTIRE LIABILITY FOR ANY BREACH OF THE LIMITED WARRANTY SET FORTH IN PARAGRAPH (a). BY INSTALLING THIS PRODUCT, YOU AGREE TO THE TERMS OF THIS WARRANTY, AS WELL AS ALL OTHER DISCLAIMERS AND WARRANTIES IN THIS DOCUMENT.**